

ELBA

GARMENT STEAM IRON **MODEL: EGSI-A2216(WH)**

Owner's Manual

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.


For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.

IMPORTANT SAFEGUARDS

When using this appliance, basic precautions should always be followed, including the following:

- 1.** Read all instructions before use.
- 2.** Use appliance for its intended use only.
- 3.** This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the warranty will not apply.
- 4.** This appliance is not designed to be used by people (including children) with a physical, sensory or mental impairment, or people without knowledge or experience, unless they are supervised or given prior instructions concerning the use of the appliance by someone responsible for their safety.
- 5.** Children must be supervised to ensure that they do not play with the appliance.
- 6.** Do not leave appliance unattended while plugged in or while it is still hot.
- 7.** Do not operate the appliance with a damaged cord, plug or steam hose or after the appliance malfunctions, or it is dropped or damaged in any manner.
- 8.** To reduce the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. Return the appliance to the nearest authorized service center for examination, repair or adjustment.
- 9.** To reduce the risk of contact with hot steam emitting from the steam vents, please hold the steam head away from your body while operating the appliance.
- 10.** Only use the steam head in an up and down vertical position. Never use the steam head in a horizontal position or tilt into a backward position; this may result in water discharge.
- 11.** To reduce the risk of electric shock, do not immerse the appliance in water or any other liquids.
- 12.** To remove the plug from the wall outlet, please grasp the plug to pull out from wall outlet. Never pull the cord to unplug the plug from wall outlet.
- 13.** Do not allow the cord contact with hot surfaces. Let the appliance cool down completely before storing.
- 14.** Do not try to fasten or loosen the steam connector during operation. Scalding may occur if the steam tube is removed while using the appliance. Always unplug the appliance from the electrical outlet when filling with water, emptying or when not in use.
- 15.** The use of foreign accessory attachments that are not supplied by ELBA is not recommended as it may result in fire, electric shock or personal injury.
- 16.** **WARNING!** Be careful when empty the water tank after use as there may be hot water in the reservoir.
- 17.** Do not contact directly the steam head to people, animals or cloth that one is wearing.
- 18.** This appliance is intended for household use only. This is a floor appliance and never carry it while in use.
- 19.** To avoid circuit overload, do not operate this appliance above 2250 wattage.

PRODUCT DESCRIPTION

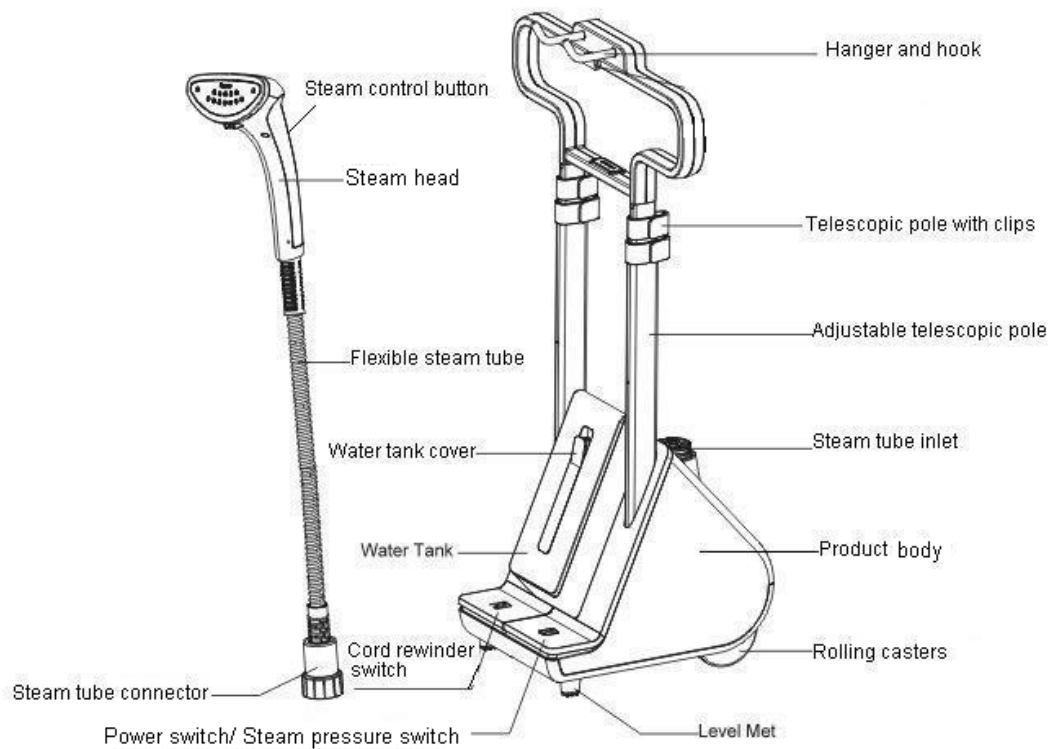

OPERATING THE APPLIANCE

1. Installation

Note: Do not switch on the power while installing the appliance.

- Remove all the packaging.
- Fig 1: You will find the following parts:-

1. Product body including water tank	1 pc
2. Steam head	1 pc
3. Flexible steam tube	1 pc
4. Hanger and hook	1 pc
5. Telescopic pole with clips	2 pcs
6. Brush - Standard brush and porous hair brush	1 pc each
7. Splint	1 pc
8. Instruction manual	1 pc
9. Warranty Card	1 pc

- Fig 2: Install the telescopic tube into the product body.
- Fig 3: Install the hanger to the telescopic tube.
- Fig 4: To adjust the length of the telescopic tube, open the telescopic pole clips.
- Fig 5: Adjust to desired length and fasten the clips on the telescopic poles.
- Fig 6: Connect the steam tube connector to the steam tube inlet.
- Fig 7: Place the steam head on the hanger hook.

Note: Please install the brush to the steam head before operating the appliance.

2. Fill up the water tank

Note: Do not fill the water tank with hot water!

- Fig 8: This is the lid of the water tank.
- Fig 9: Open the lid and then fill up the water tank with tap water. Do not fill up the tank exceed the max level (refer the marking on the water tank).
- Figure 10 and 11: Close the lid and hold the water tank as per the position shown and then install to the product body.

3. Ironing instructions

- Fig 12 & 13: Pull the plug from the product body and connect the plug into the wall outlet and switch on the power. You will hear a “beep” sound. The steam indicator light on the power switch will on (in red).
- Fig: 14: After the steam indicator lamp is on, step the foot switch for different garment steam pressure. At this stage, you will hear a boiling sound from the appliance. This is normal as the appliance pump the water into the boiler and when the water fill into the hot boiler will cause the sound. Press the steam control button at the steam head and the appliance will start to generate steam for ironing after a few minutes.

Caution: Do not direct the steam head toward yourself.

- Fig 15: When the steam comes out from the steam head, you may apply it for ironing. Please hold the steam head and do not contact your body with the steam tube. Use the steam head vertically and gently iron at the position of up and down.
- Fig 16: After operating the appliance, turn off the power and press the cordrewinder switch. Dump the remaining water inside the water tank, and let the appliance dry for 5 minutes.

WARNING! Be careful when empty the water tank after use as there may be hot water in the reservoir.

4. Steam pressure switch, cordrewinder switch and steam control button

- Fig 17: Switch function:
 - (i) Adjustable two level steam pressure switch / power switch-
Yellow light is for normal steam pressure.
Green light is for strong steam pressure.
 - (ii) Cordrewinder switch-
To rewind the cord after use.
- Fig 18: Steam Control button:
To pump the water from the product body to the steam head to generate steam.

5. Accessories instruction

✧ Brush

- By using the brush, the steam can easier infiltrate into the cloth.
- Before removing the brush, please switch off the power. Make sure no steam is coming out from the steam head and then only remove the brush from the steam head.

✧ Iron splint

- Install the splint on the steam head; push it tightly to its position.
- Hold the steam head, open the splint.
- Put the cloth between splint and the steam head.
- Clamp on the on the collar and start to iron.
- Before removing the brush, please switch off the power. Make sure no steam is coming out from the steam head and then only remove the brush from the steam head.

6. Storage

- Switch off the power switch (power indicator light will be off), remove the plug from the wall outlet and press the cord rewind button to rewind the power cord back into the product body.
- Remove the water tank from the body; dump the water from the water tank.
- Let the appliance dry for 5 minutes.
- Warning: Do not touch the steam tube until it has cooled down.

7. Cleaning

- Remove the water tank; wipe the product body with wet wiping cloth.
- Open the water tank lid, dump the remaining water and wash the water tank with clean water.

8. Trouble shooting

Problem	Possible Cause	Solution
After switching on the power, the appliance is not working.	1) Fault in one of the circuits. 2) The fuse is burned. 3) The plug is loose.	To be checked and repaired by specialized technician.
A noise can be heard from the steam tube but the generated steam is weak.	The remaining water in the water tank was not removed after use.	Raise the water tank, dump the remaining water, wash the water tank and refill with clean water.
Water leaking from the steam head.	1) The steam head maybe broken. 2) The steam head was used in horizontal position.	1) Replace the steam head with a new one. (Please contact our authorized dealer or after- sales service center for assistance) 2) Use the steam head with the position of upside and downside.
Water spilled out from the water tank.	Water tank is broken or cracked.	Replace the water tank. (Please contact our authorized dealer or after- sales service center for assistance)

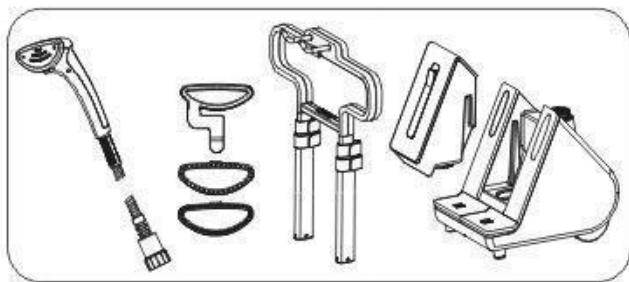


Fig. 1

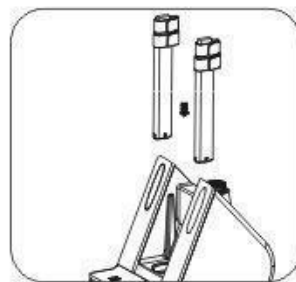


Fig. 2

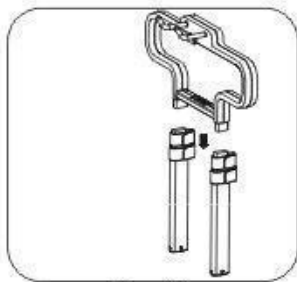


Fig. 3

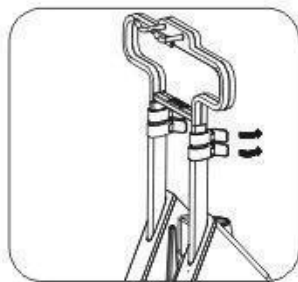


Fig. 4

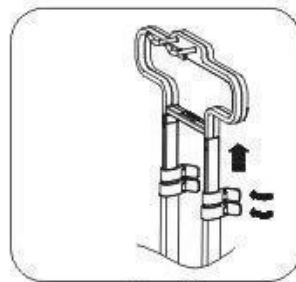


Fig. 5

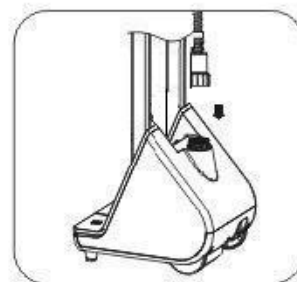


Fig. 6



Fig. 7

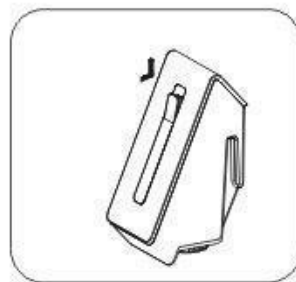


Fig. 8

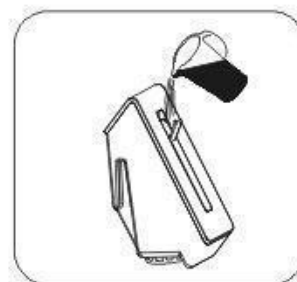


Fig. 9



Fig. 10

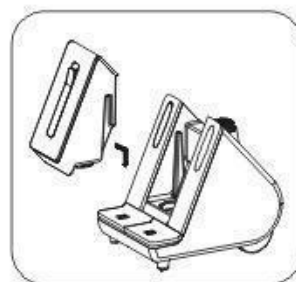


Fig. 11

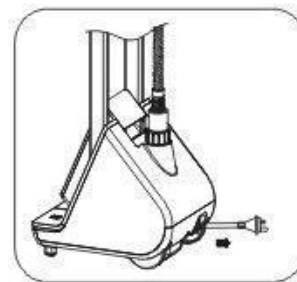


Fig. 12

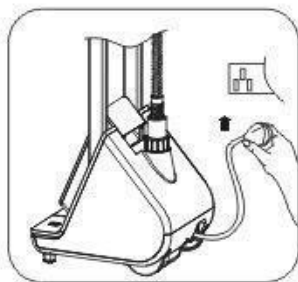


Fig. 13

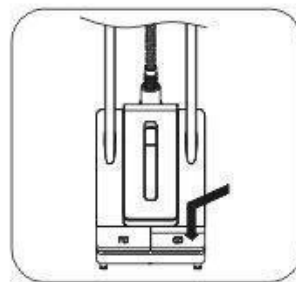


Fig. 14

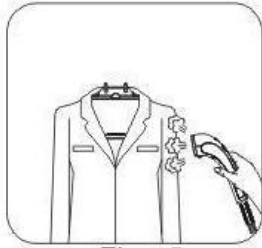


Fig. 15

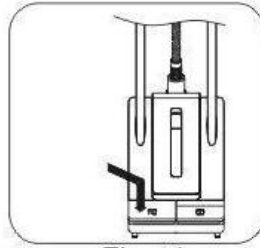


Fig. 16

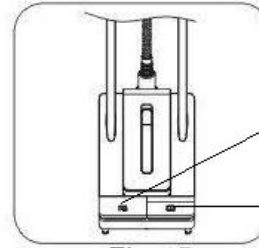


Fig. 17

Cord rewriter switch

Power switch/
Steam pressure switch

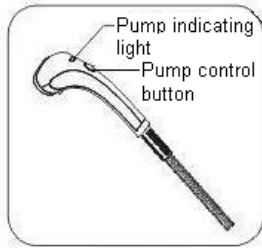


Fig. 18

Pump indicating
light
Pump control
button

ELBA